

FARAD[®]BARS

made in italy

BS 024

SUZUKI ALTO 2009-2014

NISSAN PIXO 2009-2014



5



I Istruzioni di montaggio

F Instructions de montage

PL Instrukcja montażu

D Einbauanleitung


GB Fitting instructions

E Instrucciones de montaje

NL Inbouwhandleiding


SWE Montageanvisnin

KIT BS

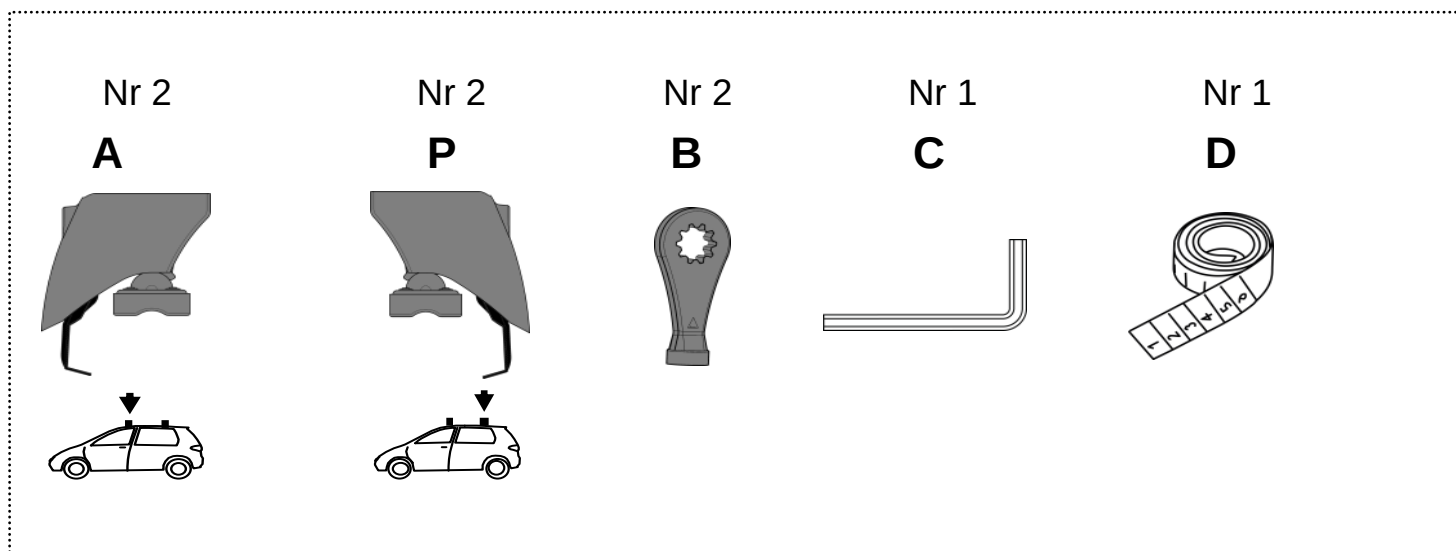











+


KIT ALU

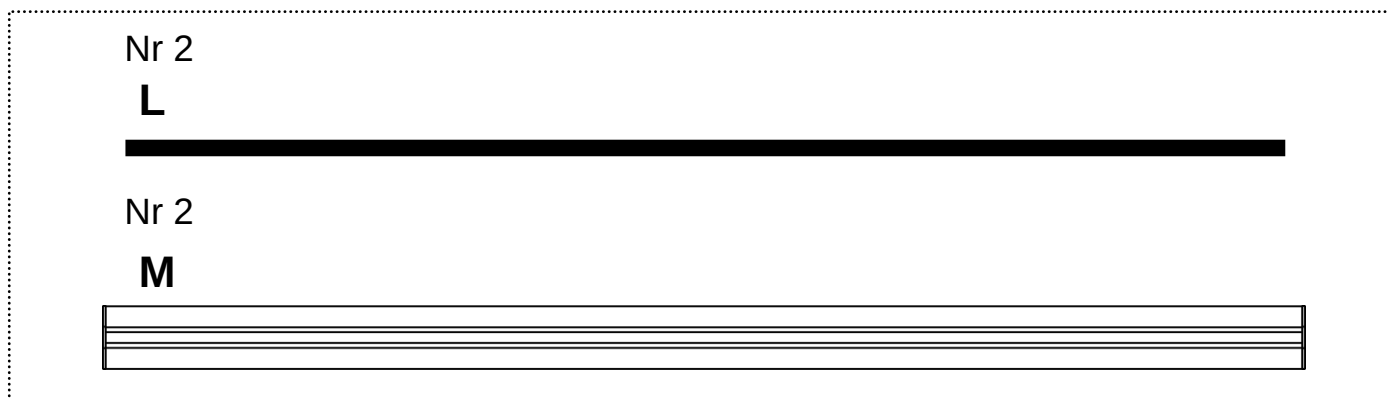




=


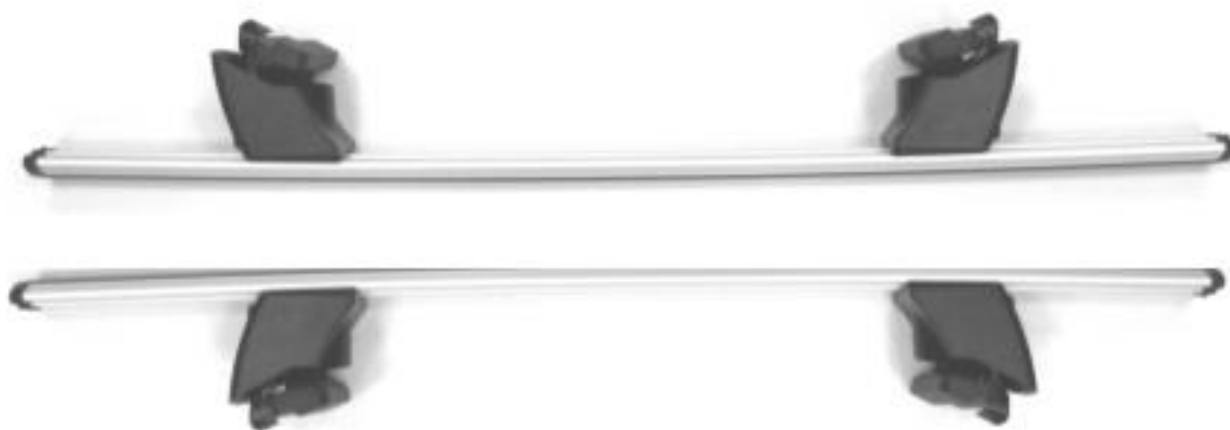


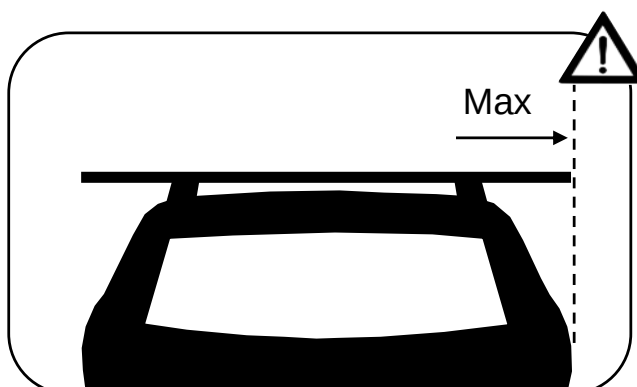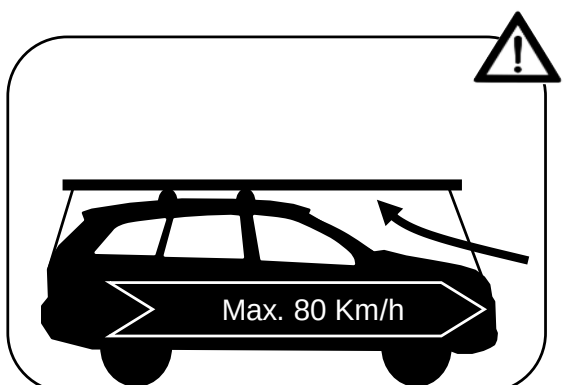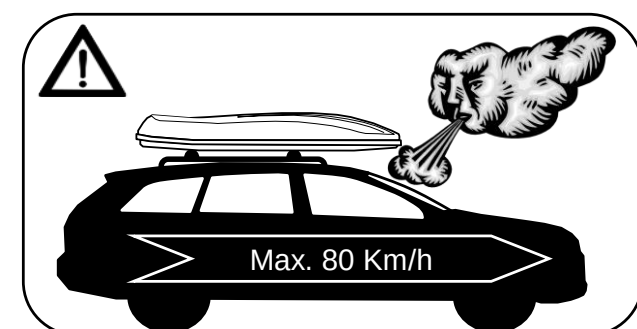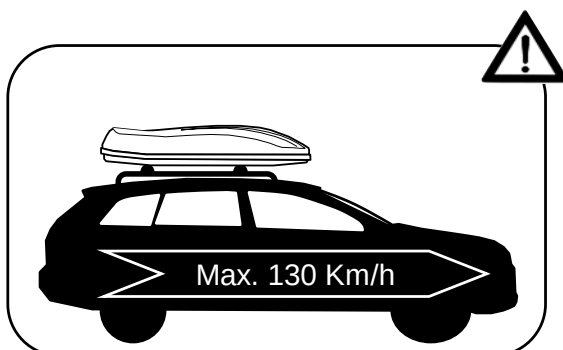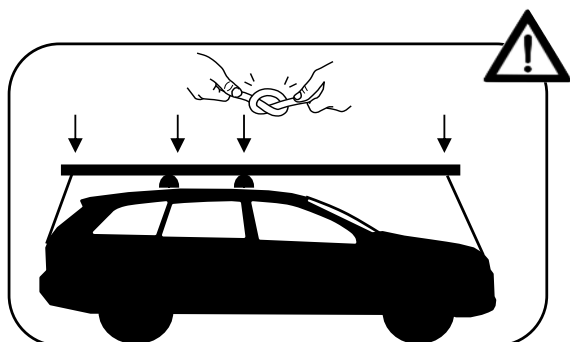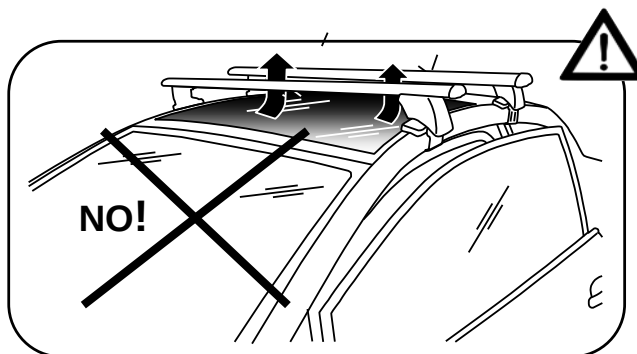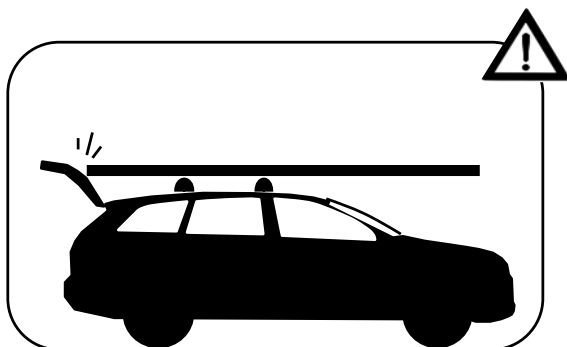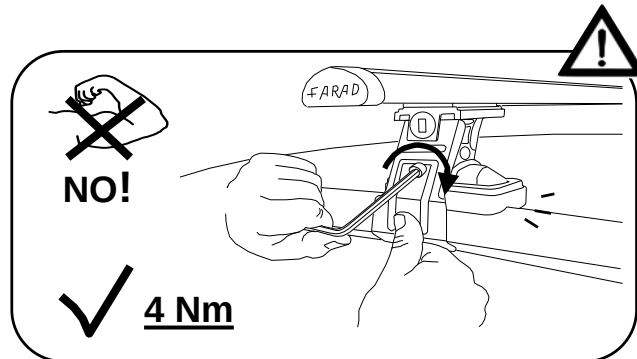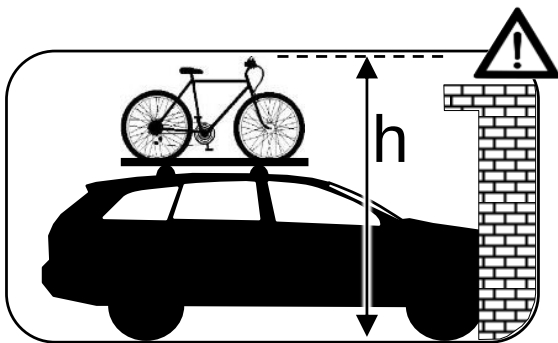

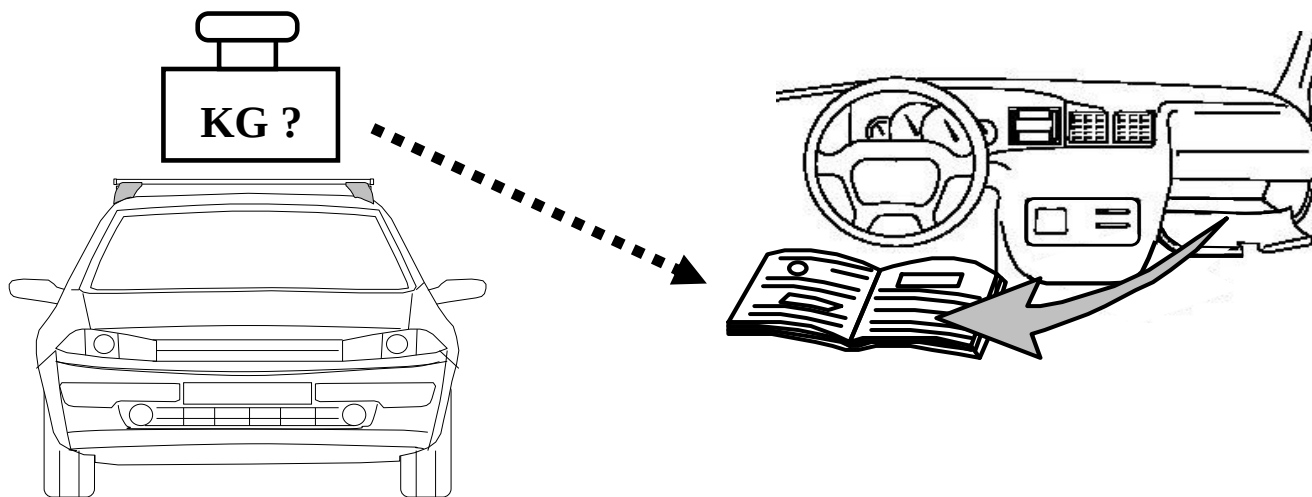

- | | | | |
|----|--|-----|---|
| I | Controllare carico del tetto sul manuale dell'auto | F | vérifier le chargement manuel du toit de la voiture |
| PL | Sprawdź ładowność dachu w instrukcji | D | überprüfen Sie die manuelle Beladung der Autodach |
| GB | Check roof load capacity in car instruction | E | comprobar la carga manual del techo del coche |
| NL | check de handleiding belasting van het dak van de auto | SWE | kontrollera manuell inläggning på taket av bilen |

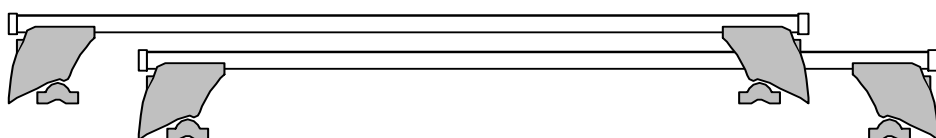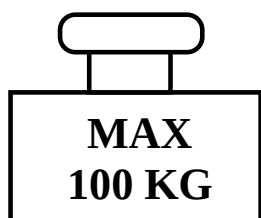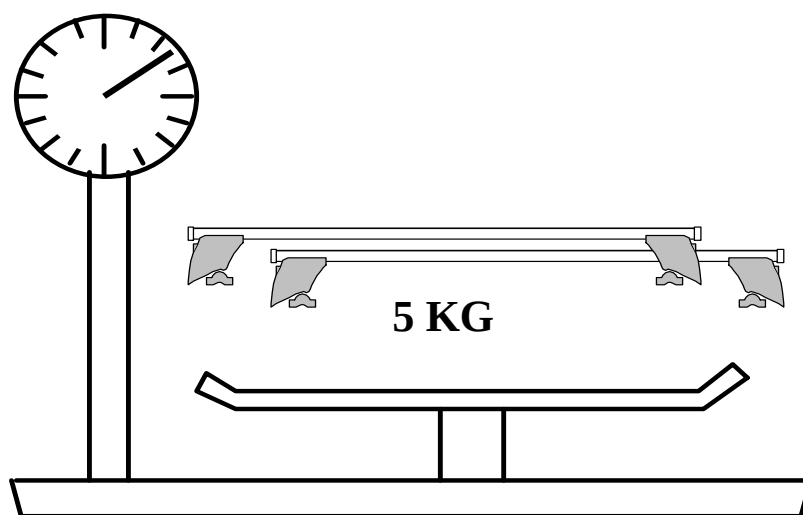

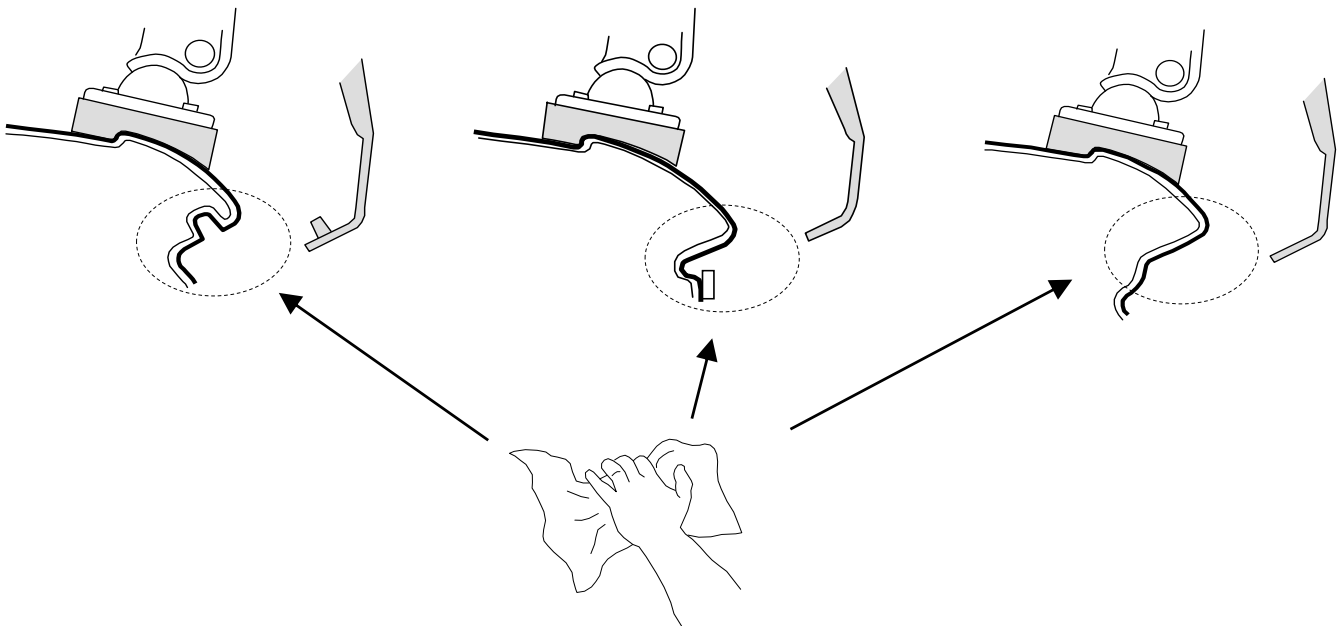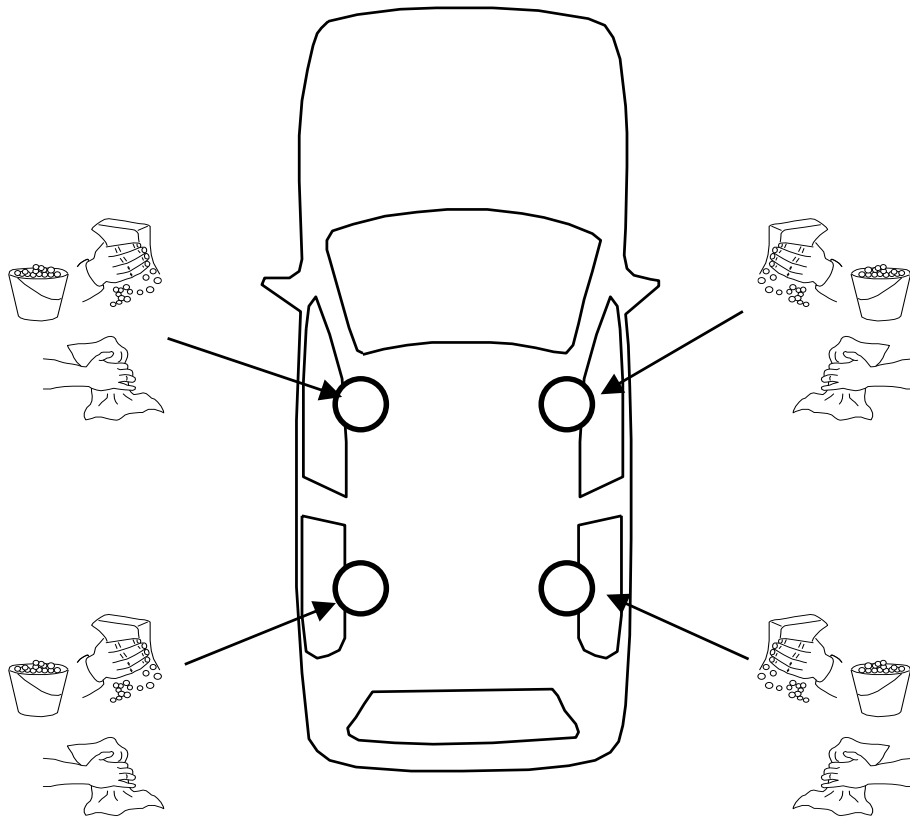

I Montaggio Barra Anteriore

F Fixation Barre Avant

PL Montaż Bagażnika Bazowego Tylnego


GB Fitting Front Roof Bar

D Montage Vorderes Dachträgers

NL Montage Voorste Dakdrager



SWE Monterings Av Främre Lasthållaren


E Fijación Barra Frontal

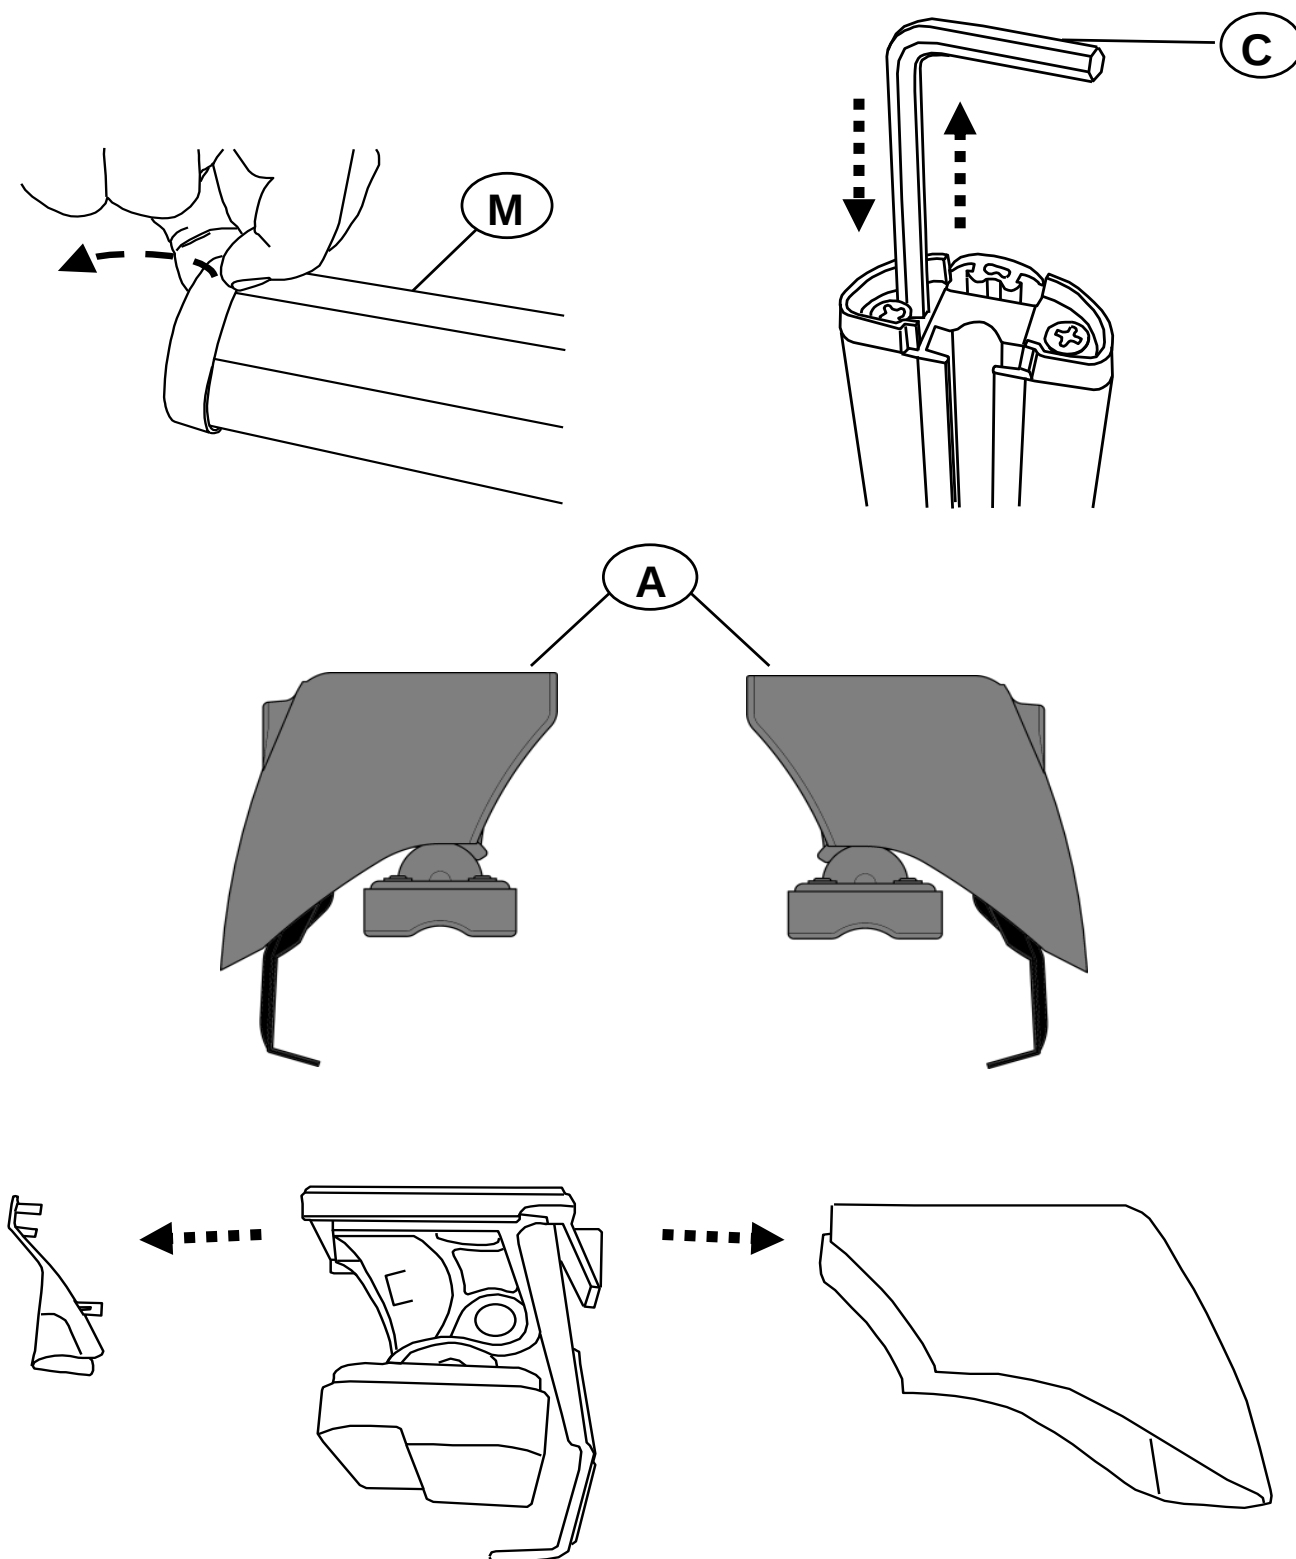








M

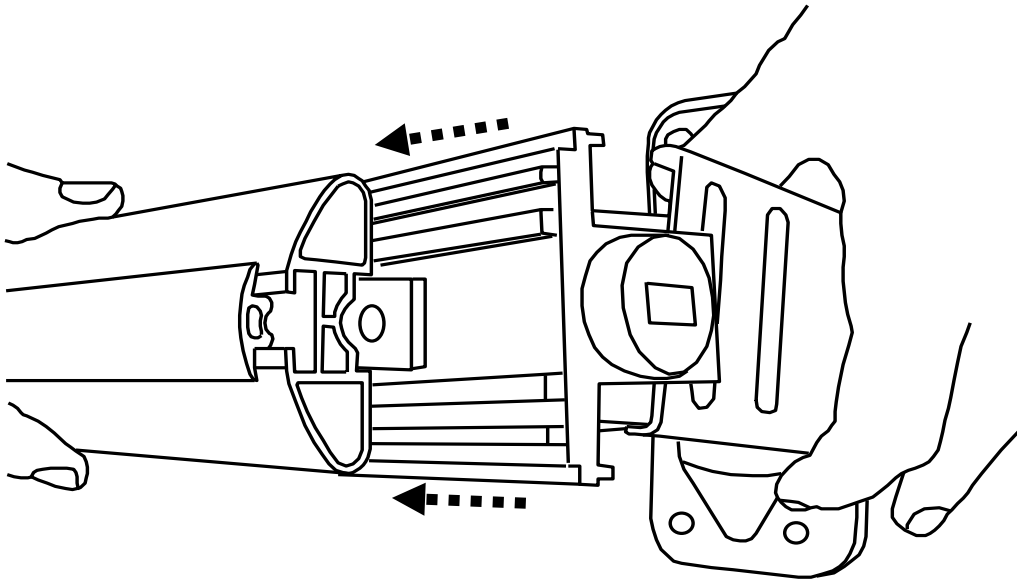
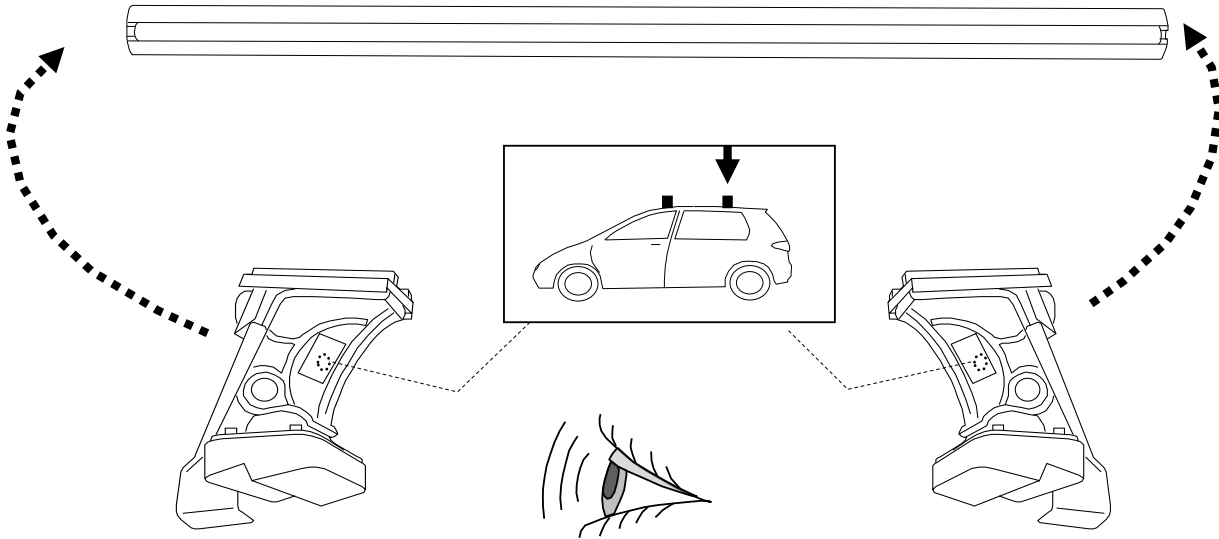


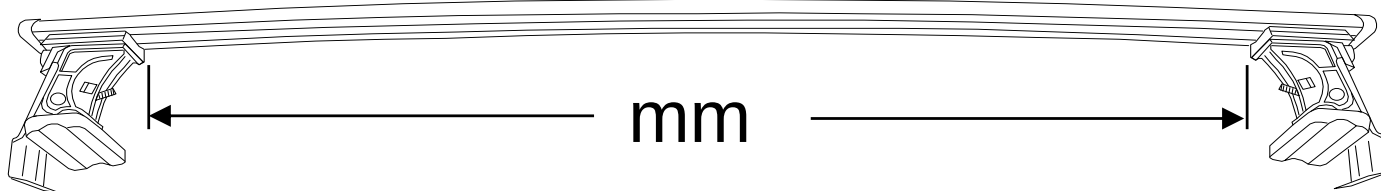


				R	mm
SUZUKI	ALTO	5	2009-2014	R= 42	970
NISSAN	PIXO	5	2009-2014	R= 42	970


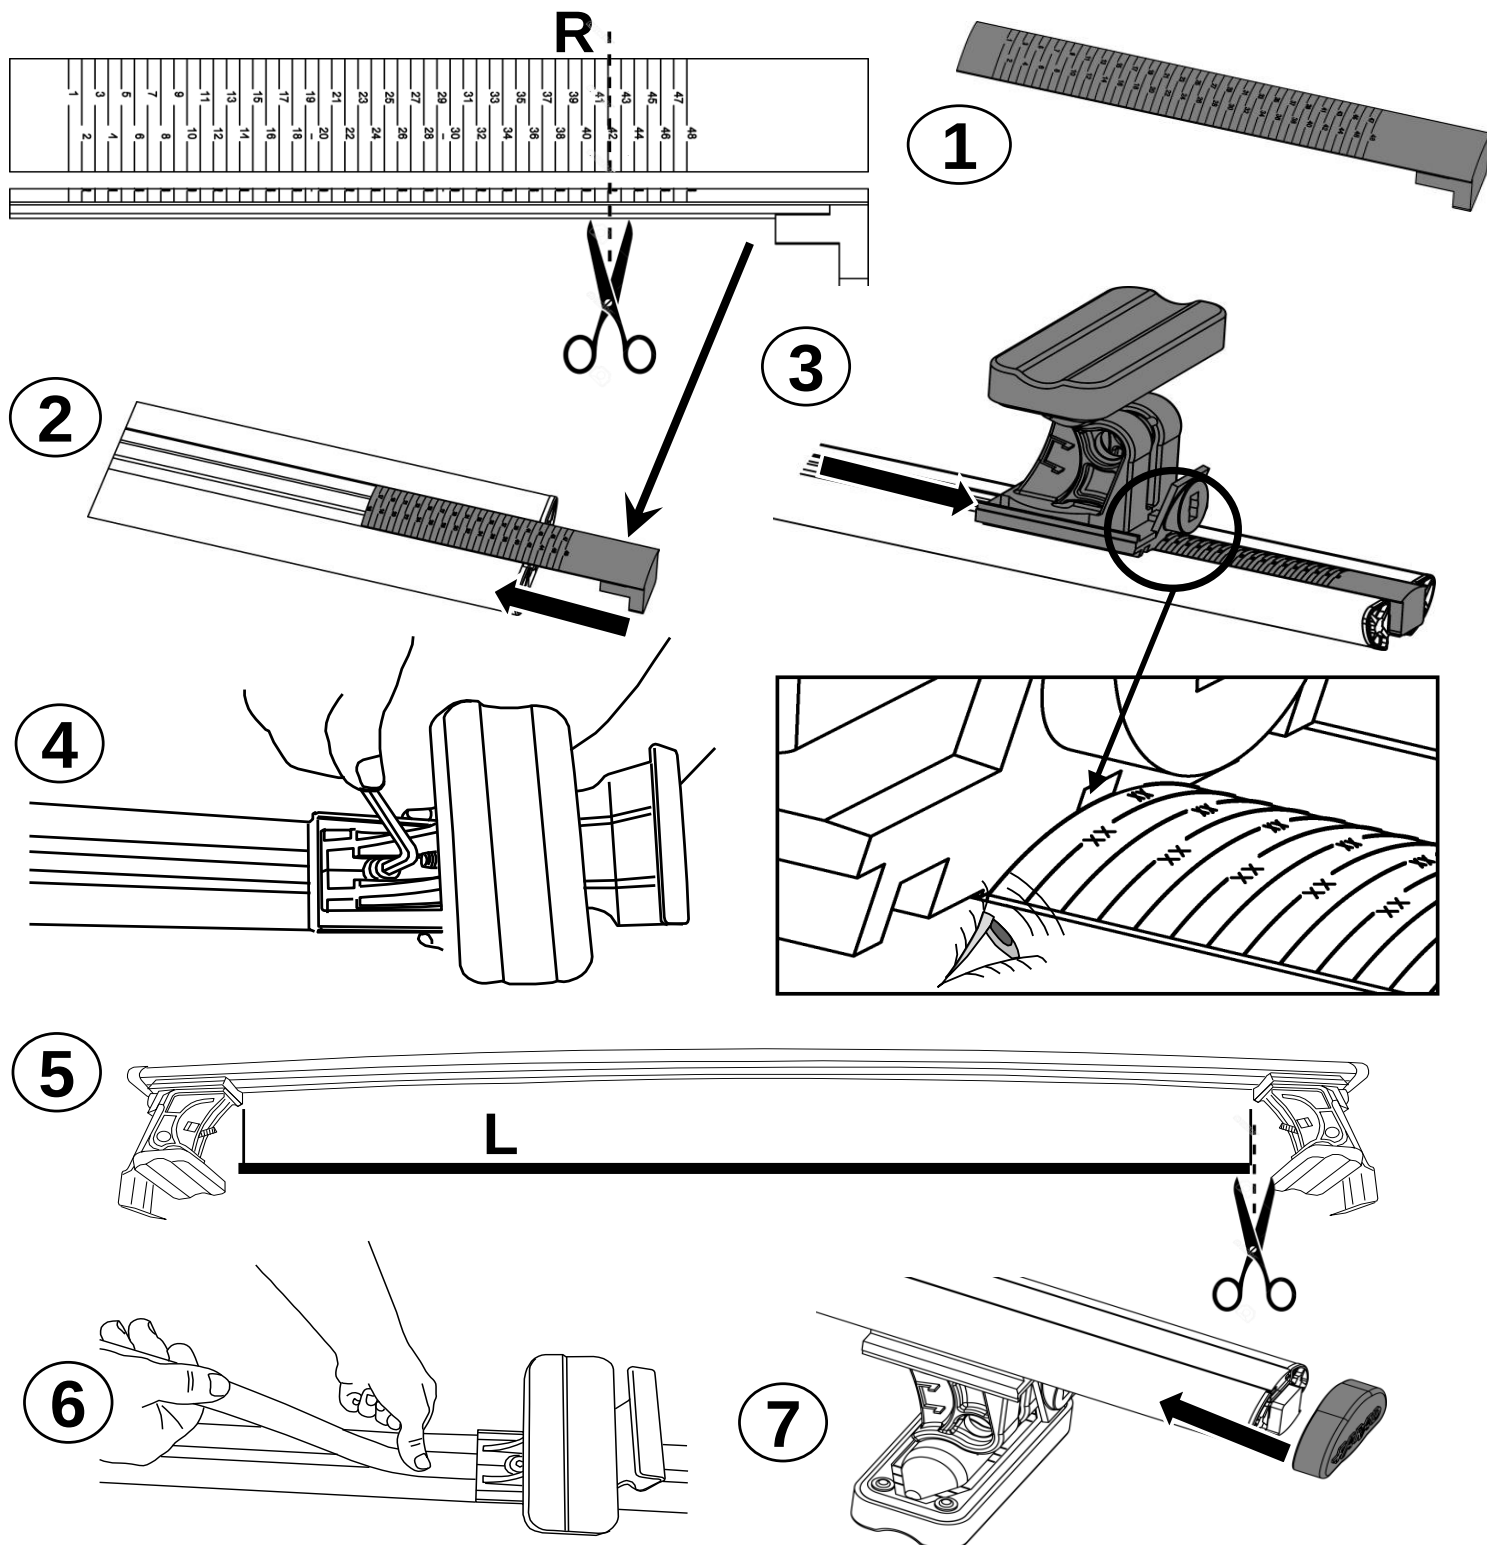


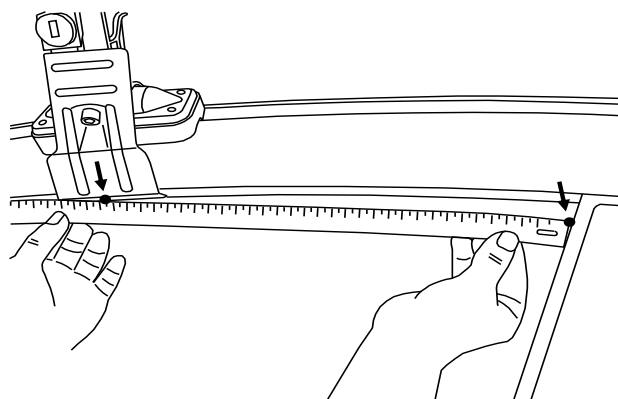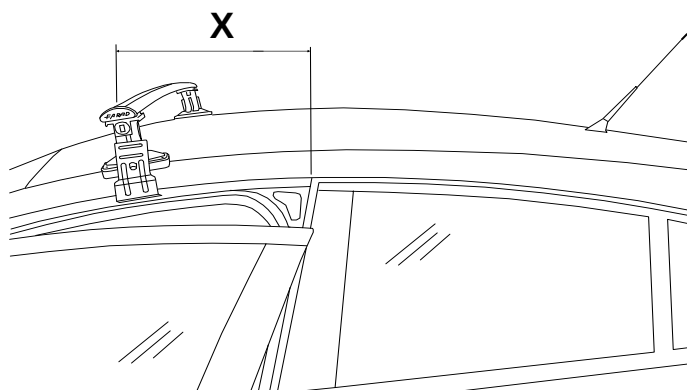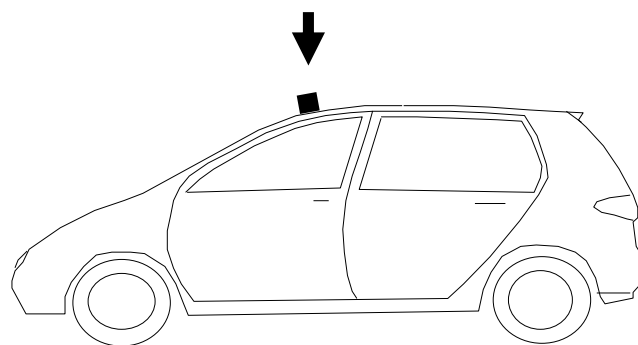


				X
SUZUKI	ALTO	5	2009-2014	X= 270
NISSAN	PIXO	5	2009-2014	X= 270






✓ 4 Nm


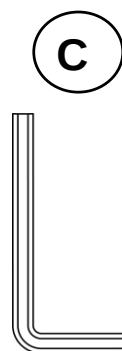
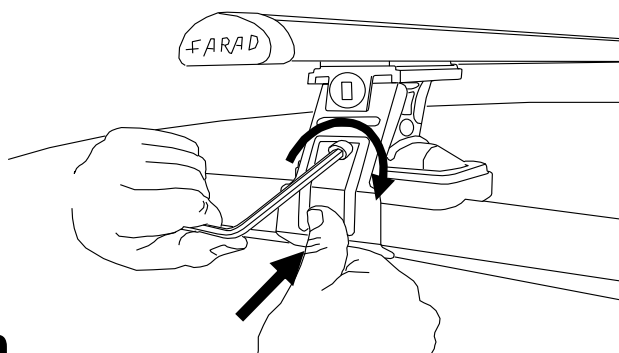



REV 000	10/05/2011	9 / 20
----------------	-------------------	---------------

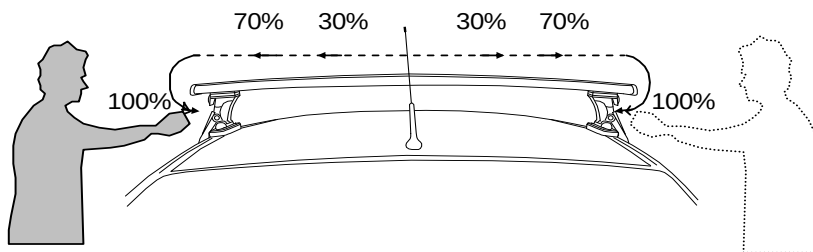

- | | | | |
|----|---|-----|------------------------------------|
| I | Alternare il fissaggio delle viti | F | Serrer alternativement chaque côté |
| PL | Śruby dokręcaj naprzemiennie | D | Die Schrauben abwechselnd anziehen |
| GB | Tighten alternately | E | Apretar alternativamente |
| NL | Afwisselend aan de linker- en de rechterkant aandraaien | SWE | Dra åt växelvis |

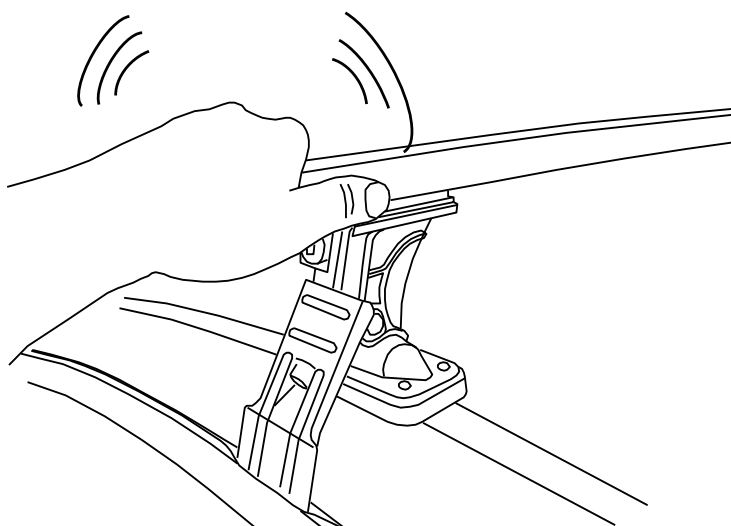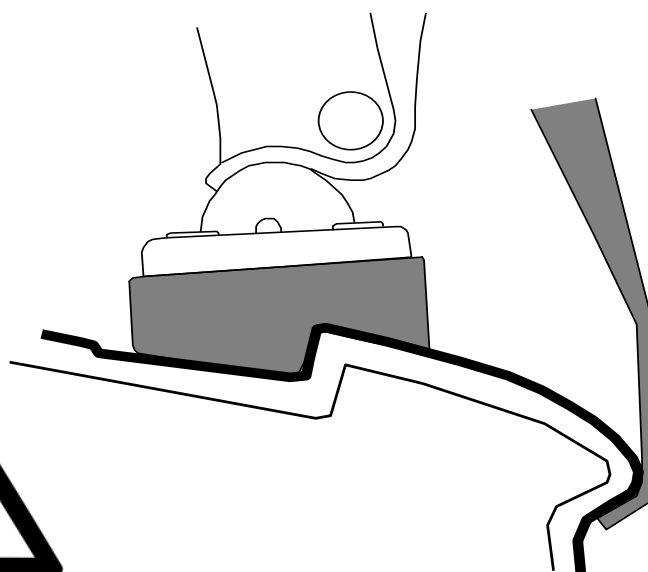

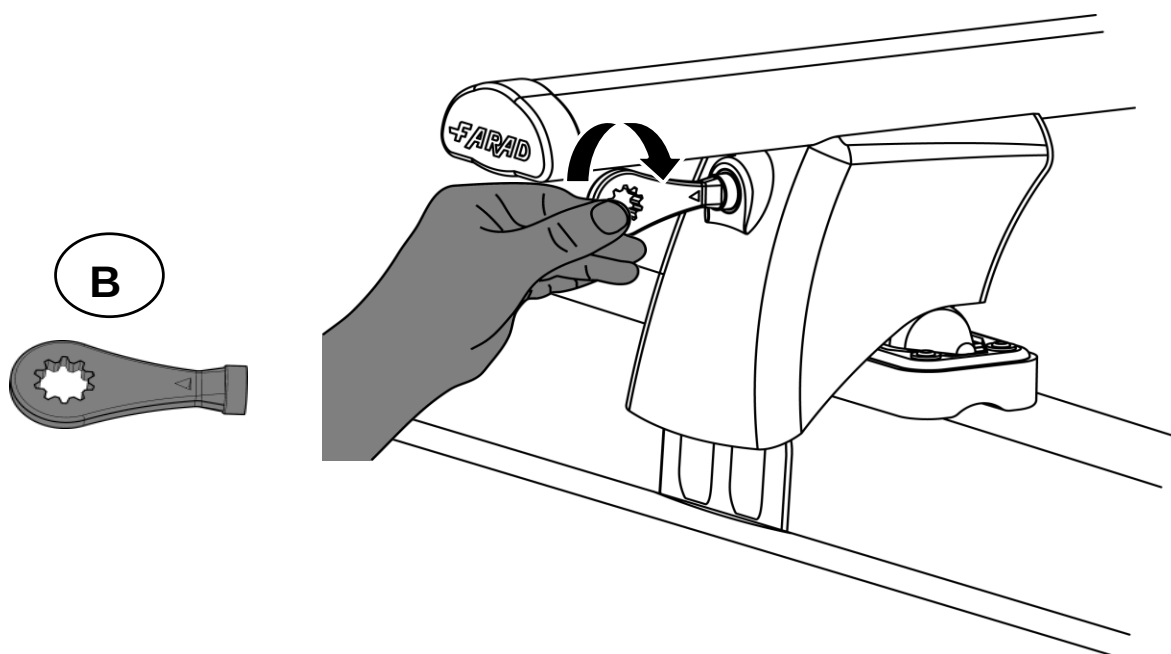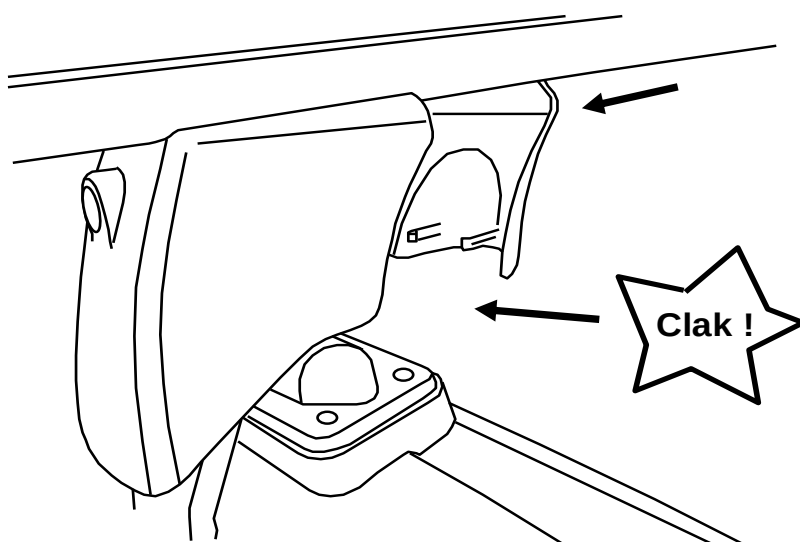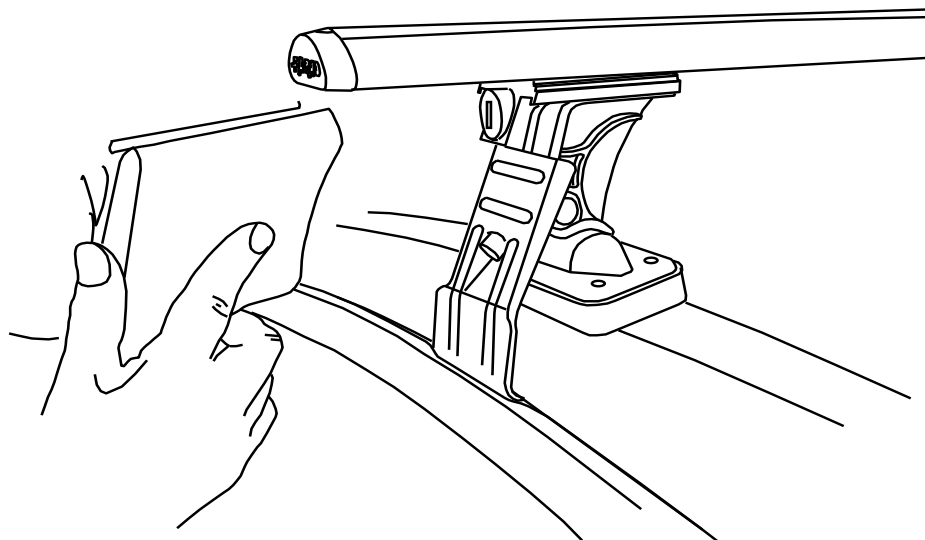

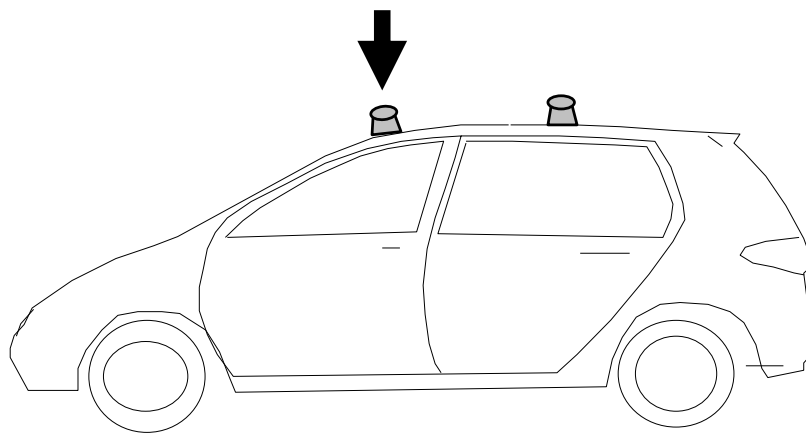

- I** CONTROLLARE PERIODICAMENTE IL FISSAGGIO DELLE VITI
- PL** OKRESOWO SPRAWDZAJ MOCOWANIE ŚRUB
- GB** CHECK THE SCREW FASTENING PERIODICALLY
- D** REGELMÄSSIG ÜBERPRÜFEN DIE BEFESTIGUNG DER SCHRAUBEN
- SWE** REGELBUNDET KONTROLLERA OM FASTSTÄLLANDE AV SKRUVARNA
- F** VERIFIEZ LA FIXATION DES VIS PERIODIQUEMENT

I Montaggio barra posteriore

PL Montaż Bagażnika Bazowego Przedniego

SWE Montering Främre Lasthållaren


NL Montage Achterste Dakdrager

F Fixation Barre Arriere

GB Fitting Rear Roof Bar



E Fijación Barra Trasera


D Montage Heckdachträgers


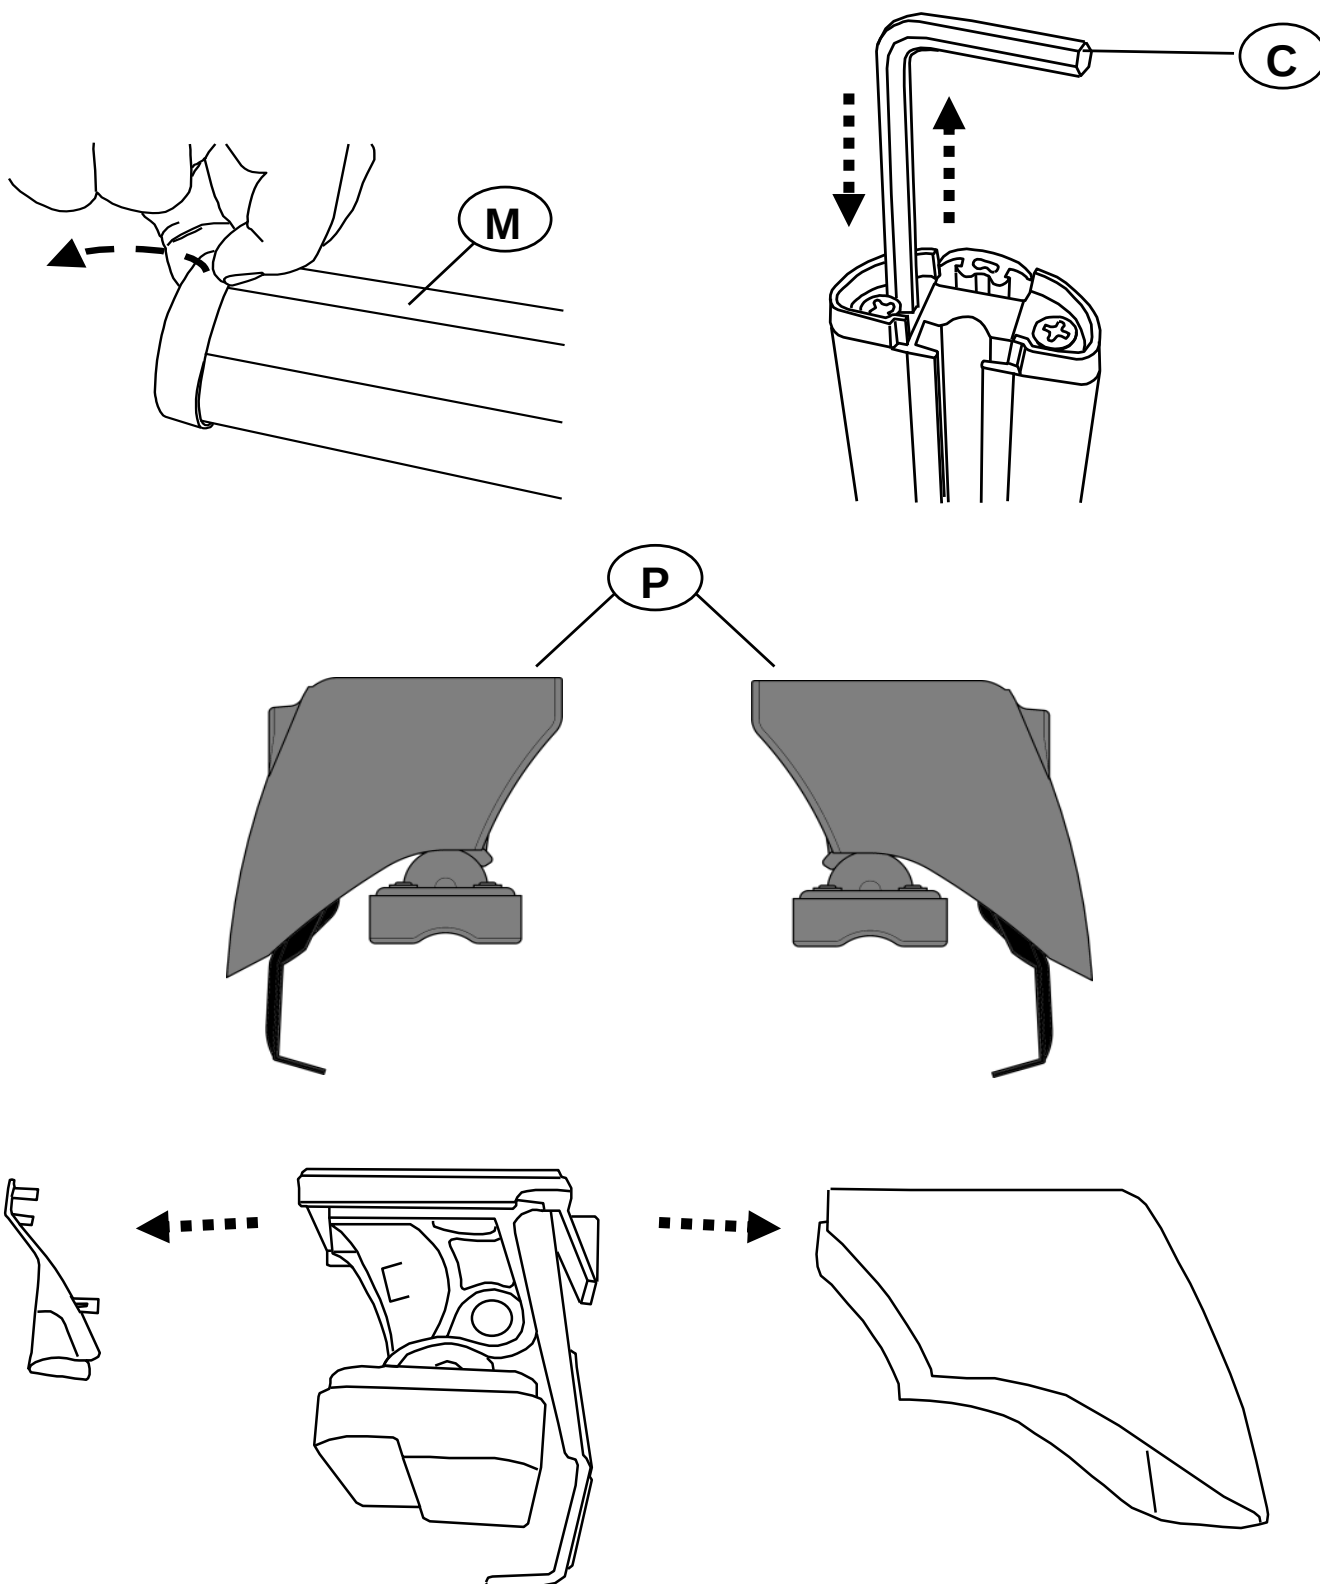








M

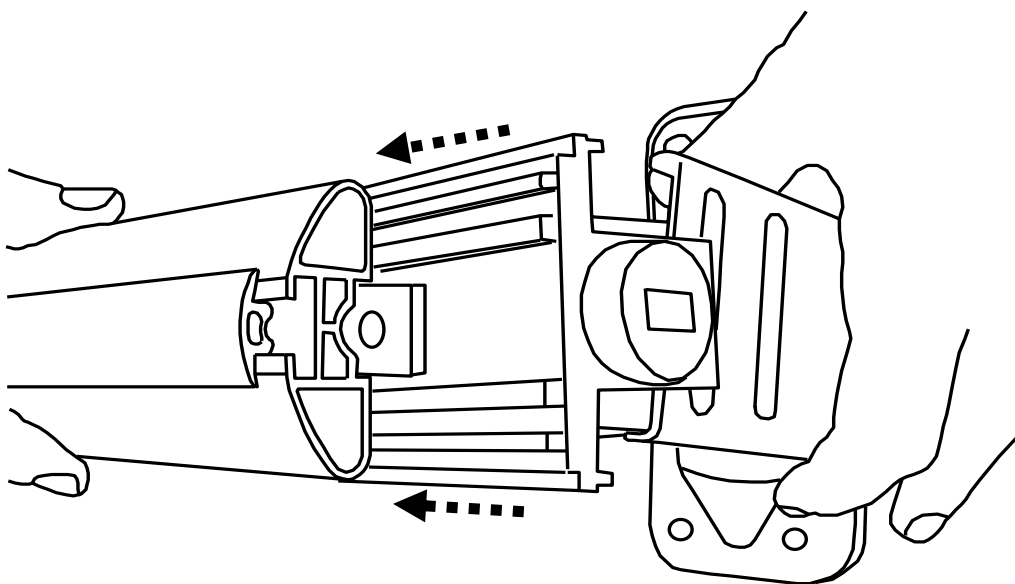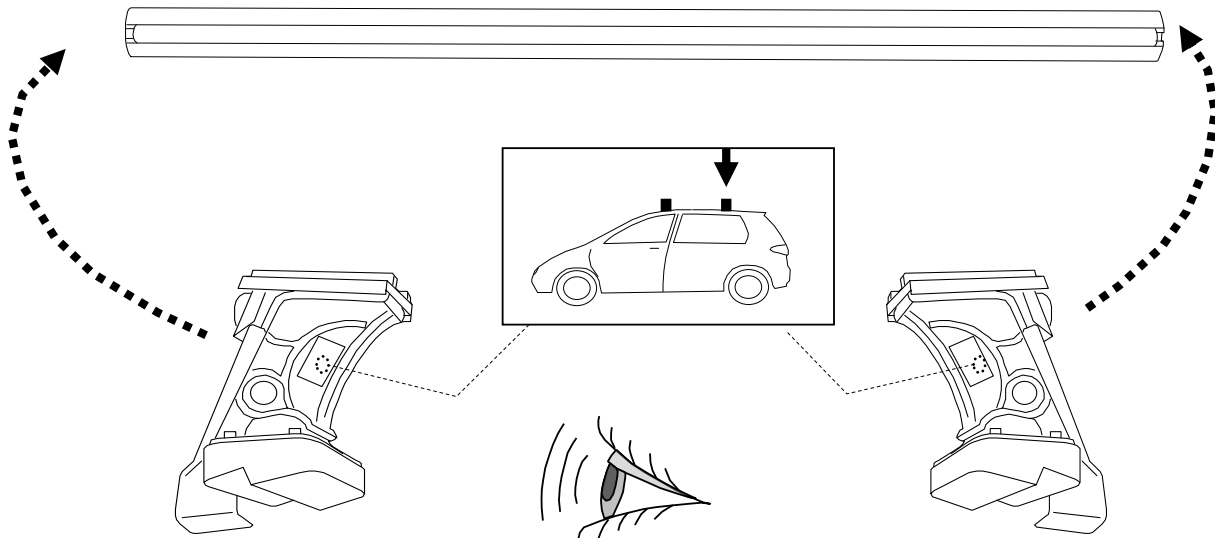


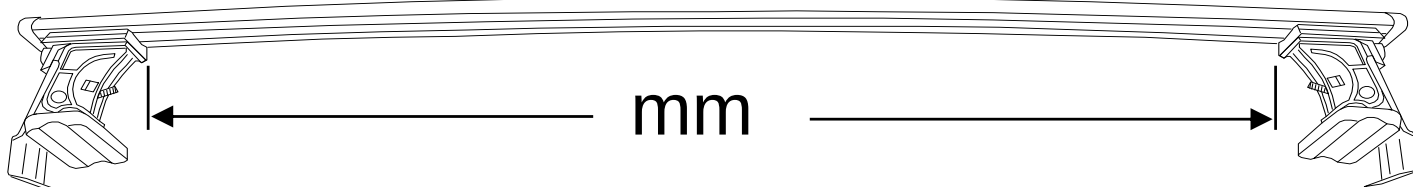


				R	mm
SUZUKI	ALTO	5	2009-2014	R= 30	910
NISSAN	PIXO	5	2009-2014	R= 30	910


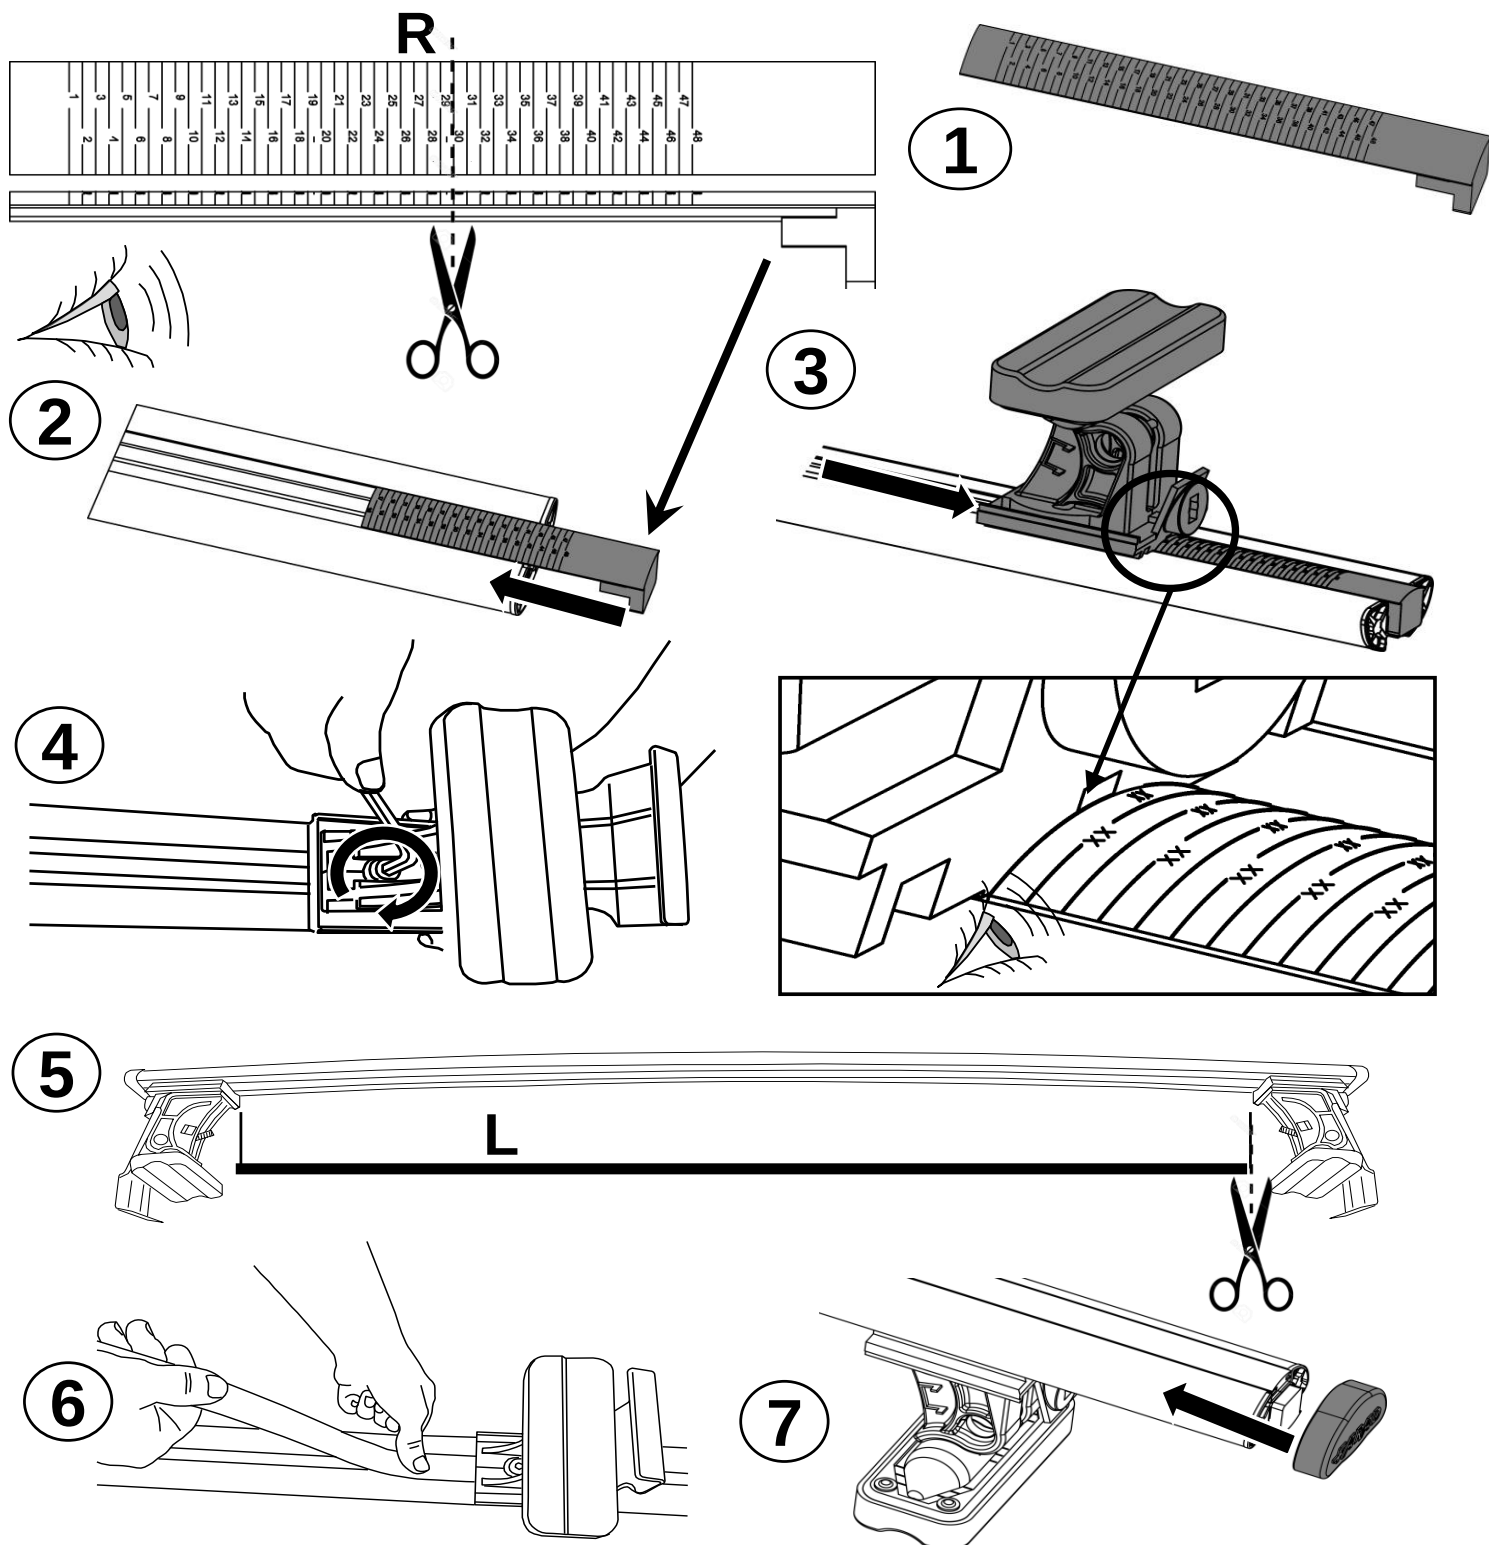


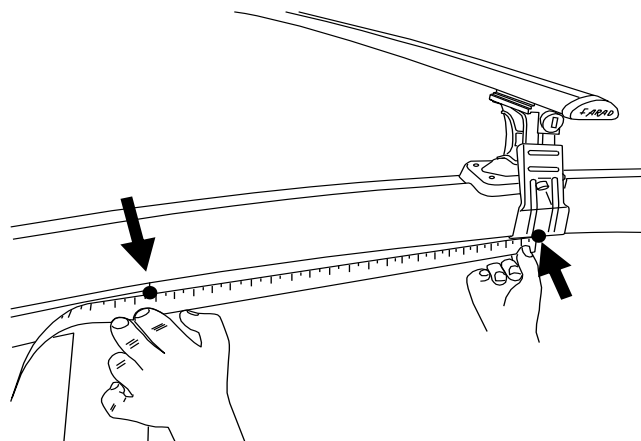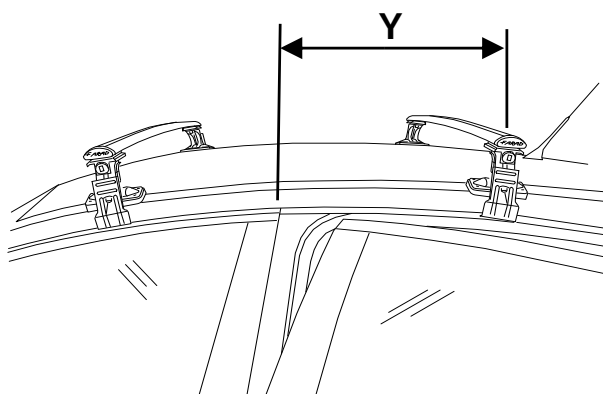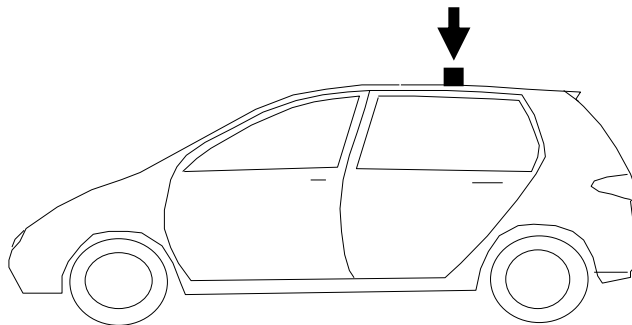


				Y
SUZUKI	ALTO	5	2009-2014	Y= 330
NISSAN	PIXO	5	2009-2014	Y= 330






✓ 4 Nm



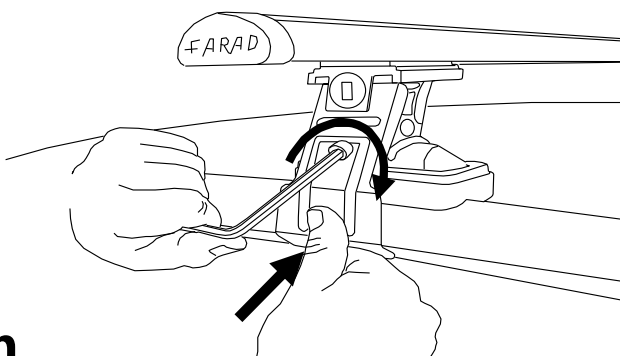



REV 000	10/05/2011	16 / 20
---------	------------	---------

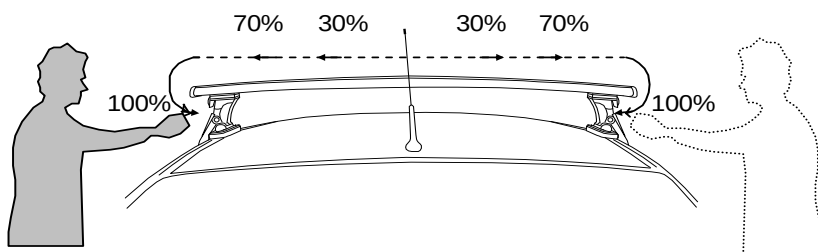

- | | | | |
|----|---|-----|------------------------------------|
| I | Alternare il fissaggio delle viti | F | Serrer alternativement chaque côté |
| PL | Śruby dokręcaj naprzemiennie | D | Die Schrauben abwechselnd anziehen |
| GB | Tighten alternately | E | Apretar alternativamente |
| NL | Afwisselend aan de linker- en de rechterkant aandraaien | SWE | Dra åt växelvis |

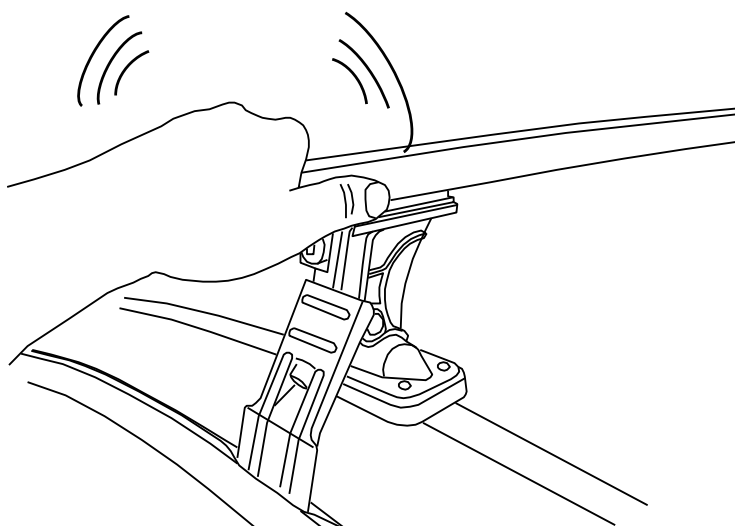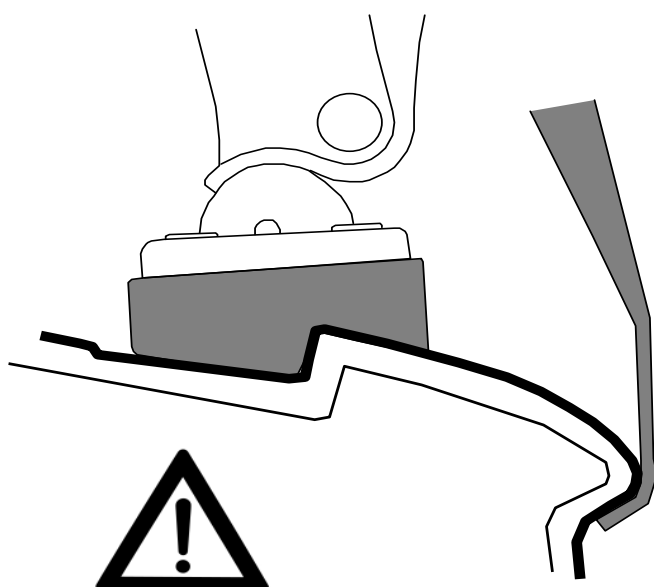

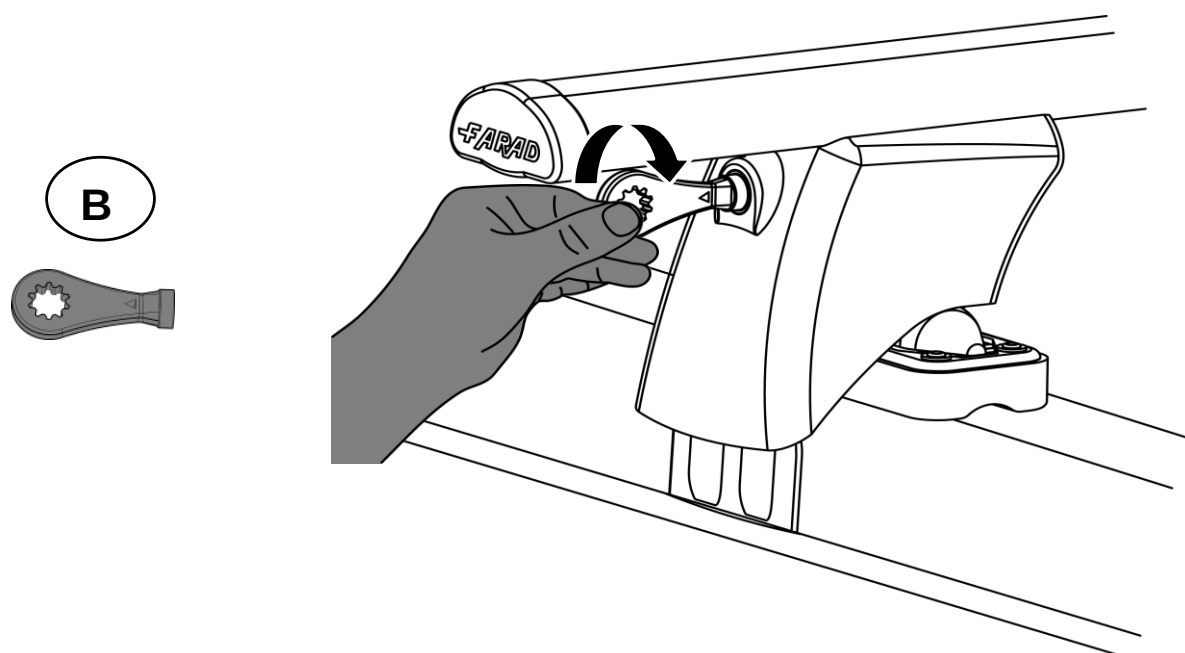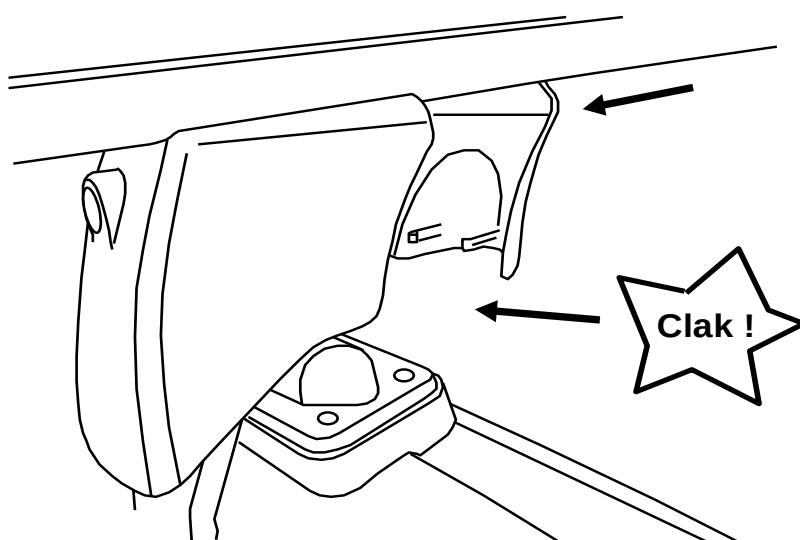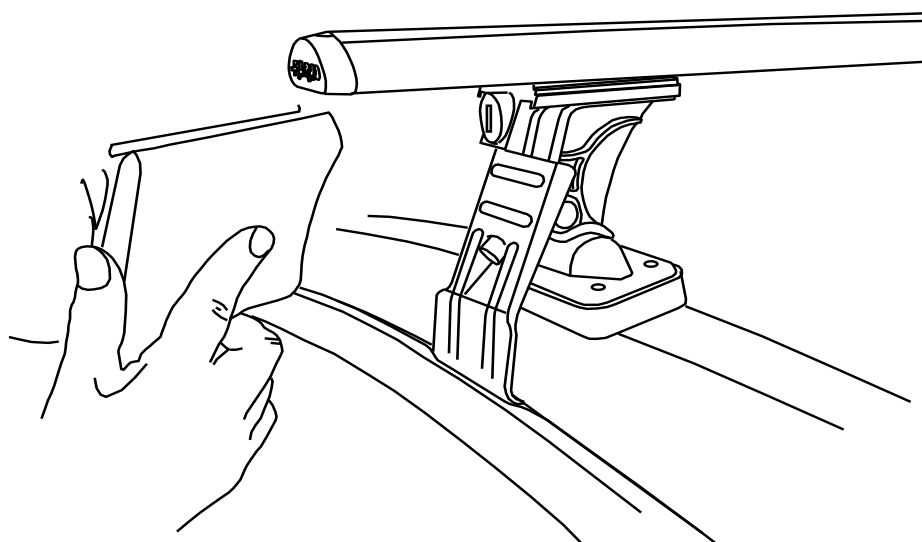

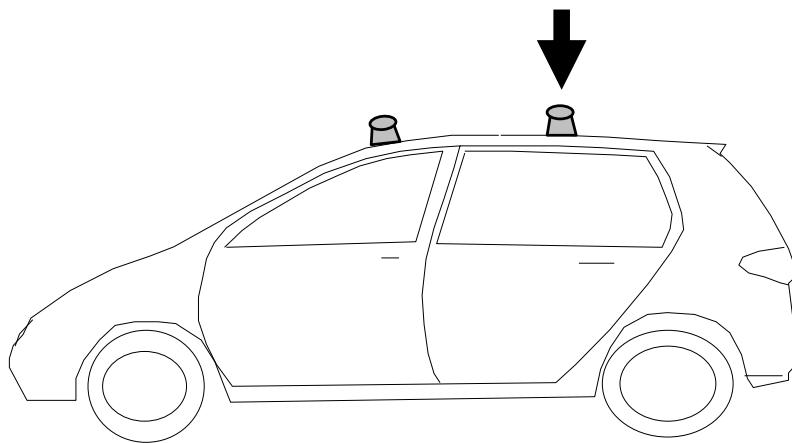


- I** CONTROLLARE PERIODICAMENTE IL FISSAGGIO DELLE VITI
- PL** OKRESOWO SPRAWDZAJ MOCOWANIE ŚRUB
- GB** CHECK THE SCREW FASTENING PERIODICALLY
- D** REGELMÄSSIG ÜBERPRÜFEN DIE BEFESTIGUNG DER SCHRAUBEN
- SWE** REGELBUNDET KONTROLLERA OM FASTSTÄLLANDE AV SKRUVARNA
- F** VERIFIEZ LA FIXATION DES VIS PERIODIQUEMENT


RICAMBI - SPARE PARTS




PIEDE GIREVOLE
90341 / 2



PIEDE FISSO
90341 / 15

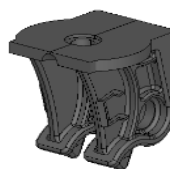

SUPPORTO CENTRALE
90341 / 1



SUPPORTO BARRA
90341 / 5




SOTTO PIEDE SP01
90341 / 3




SOTTO PIEDE SP03
90341 / 16



SOTTO PIEDE SP04
90341 / 13



SOTTO PIEDE SP07
90341 / 11



SOTTO PIEDE SP08
90341/14




SOTTO PIEDE SP10
90341 / 12



SOTTO PIEDE SP12
90341 / 1



CHIAVE ESAGONALE 6
9331 / 148



PIASTRINA
90341 / 21



DISTANZIALE
90341 / 20




NOTTOLINO + N° COMB.
90341 / 6




SOTTOTAPPO
90241 / 9



TAPPO BARRA
90241 / 6

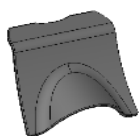


INVOLUCRO POST.
90341 / 9

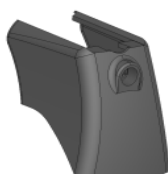

INVOLUCRO ANTERIORE
90341 / 8




CHIAVE + N° COMB
90341 / 7

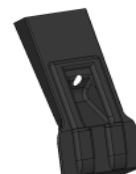

PALETTA
90341 / 4



BARRA ALLUMINIO
90241 / 7

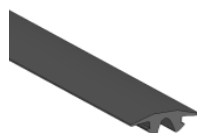


GUARNIZIONE BARRA
90241 / 8



RIGA CARTA
90341 / 19



PERNO
90241 / 15



GUARNIZIONE
NUMERICA
91141 / 14

FARAD[®]
made in Italy

tel. 011 9713719 - n° verde 800984229
www.faradworld.com